



CAUTION: PINCH POINTS & SHARP EDGES MAY BE LOCATED IN THIS AREA

Plate Mount Instructions

Make sure the Plate Mount location is rigid enough to support your mixer during operation. We recommend that the shaft is left out during this step to avoid damage to the side wall of tank, shaft or impellers during installation.

- Make sure (4) Isolation Pads in Plate Mount line up with holes in tank or bridge mounting location.
- **Keep in mind to allow for clearance between impellers and side wall of tank once shaft and impellers are installed (see Mounting Guidelines section).**
- Place Pro mixer drive assembly with Plate Mount in desired location and secure with lock nuts or use service removeable thread-locker on standard thick hex nuts (nuts not included). Tighten nuts to torque specification (**see Torque Chart – Installation Section**).
- Mixer drive may vibrate due to flexibility in isolation pads.

