



CAUTION: PINCH POINTS & SHARP EDGES MAY BE LOCATED IN THIS AREA

Plate with Angle Risers Mount Instructions

Make sure the Plate Mount with Angle Risers location will support your mixer during operation. We recommend that the shaft is left out during this step to avoid damage to the side wall of tank, shaft or impellers during installation.

- Make sure (4) holes in *Angle Riser Brackets* line up with holes in mounting location.
- **Keep in mind to allow for clearance between impellers and side wall of tank once shaft and impellers are installed (see Mounting Guidelines section).**
- Place Pro mixer drive assembly with *Plate Mount* and *Angle Riser Brackets* in desired location and secure with (4) bolts, nuts and washers (hardware not included). Note: there are (4) clearance holes for mounting hardware in *Angle Riser Brackets*. Tighten hardware to torque specification (**see Torque Chart – Installation Section**).
- Mixer drive may vibrate due to flexibility in isolation pads.

