


QSG-109-A **QUICK START GUIDE (QSG)**

SERIES: ALL
ELECTRIC MOTOR INSTRUCTIONS

- CONFIRM MIXER SHAFT ROTATION DIRECTION MATCHES THE ROTATION ARROW ON YOUR MIXER.
- FOR 3 PHASE MOTORS, FOLLOW THE MANUFACTURER'S INSTRUCTIONS FOR INSTALLATION. EXAMPLE OF A 3 PHASE WIRING DIAGRAM ON A MOTOR:
- ALL WIRING SHOULD BE PERFORMED BY QUALIFIED ELECTRICIANS AND MEET ALL APPLICABLE NATIONAL OR LOCAL CODES.
- 120V, SINGLE PHASE, 1 HP OR LESS MIXERS TYPICALLY COMES WIRED WITH A PLUG. EXAMPLE OF A SINGLE PHASE WIRING DIAGRAM ON A MOTOR:
- ANY WIRING PROVIDED BY FUSION SHOULD BE INSPECTED BY YOUR ELECTRICAL INSPECTOR.

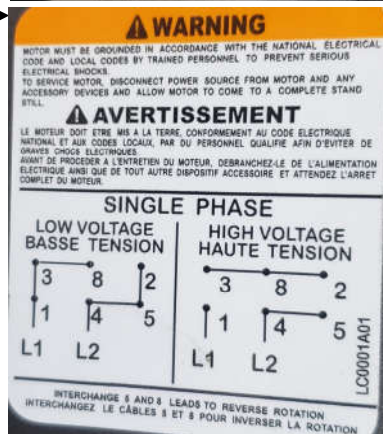

EXTENSION CORD USE IS DISCOURAGED



CAUTION

DISCONNECT MIXER FROM POWER SOURCE BEFORE ASSEMBLING, LIFTING, MOVING, OR SERVICING MIXER.


CAUTION:

- THE VISCOSITY AND SPECIFIC GRAVITY OF THE FLUID AFFECTS MIXER SIZING AND SPECIFICATIONS
- DO NOT LAY MIXER ON THE SHAFT

QSG-109-A **QUICK START GUIDE (QSG)**

SERIES: ALL
ELECTRIC MOTOR INSTRUCTIONS

- CONFIRM MIXER SHAFT ROTATION DIRECTION MATCHES THE ROTATION ARROW ON YOUR MIXER.
- FOR 3 PHASE MOTORS, FOLLOW THE MANUFACTURER'S INSTRUCTIONS FOR INSTALLATION. EXAMPLE OF A 3 PHASE WIRING DIAGRAM ON A MOTOR:
- ALL WIRING SHOULD BE PERFORMED BY QUALIFIED ELECTRICIANS AND MEET ALL APPLICABLE NATIONAL OR LOCAL CODES.
- 120V, SINGLE PHASE, 1 HP OR LESS MIXERS TYPICALLY COMES WIRED WITH A PLUG. EXAMPLE OF A SINGLE PHASE WIRING DIAGRAM ON A MOTOR:
- ANY WIRING PROVIDED BY FUSION SHOULD BE INSPECTED BY YOUR ELECTRICAL INSPECTOR.

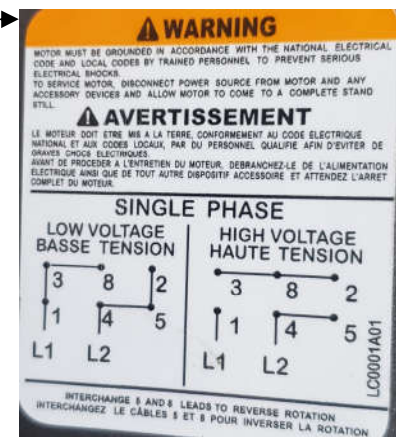

EXTENSION CORD USE IS DISCOURAGED



CAUTION

DISCONNECT MIXER FROM POWER SOURCE BEFORE ASSEMBLING, LIFTING, MOVING, OR SERVICING MIXER.

CAUTION:

- THE VISCOSITY AND SPECIFIC GRAVITY OF THE FLUID AFFECTS MIXER SIZING AND SPECIFICATIONS
- DO NOT LAY MIXER ON THE SHAFT