

QUICK START GUIDE (QSG)


SERIES: FLOW SIDE ENTRY


PHONE: 877.812.7573

E-MAIL: INFO@FUSIONFLUID.COM WEBSITE: FUSIONFLUID.COM


LINK TO HOW TO VIDEOS:

SHAFT INSTALLATION – SIDE ENTRY MIXERS

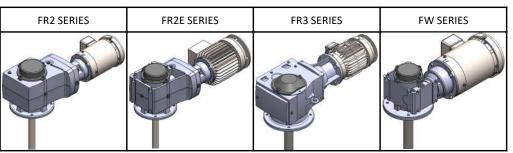


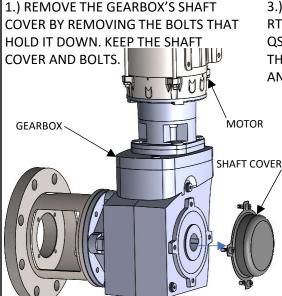


3.) REFER TO THE RT153 SINGLE OR RT153 DOUBLE SEAL INSTALLATION **QSG TO INSERT THE SHAFT THROUGH** THE PEDESTAL BORE AND SEAL BORE, AND "FLOAT" THE SEAL.

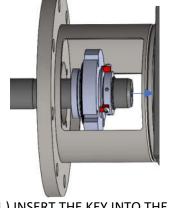

2.) ENSURE THE SNAP RING IS IN THE GEARBOX'S HOLLOW BORE ON THE SHAFT COVER SIDE.

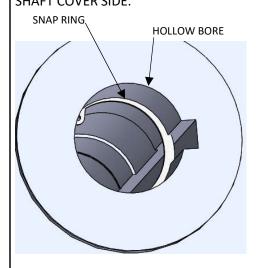

4.) INSERT THE KEY INTO THE

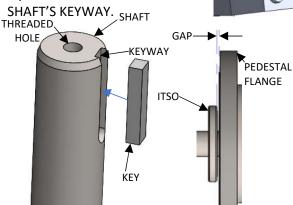

5.) INSERT THE SHAFT AND KEY INTO THE GEARBOX'S HOLLOW BORE. ENSURE THAT THE KEY IN THE SHAFT IS ALIGNED WITH THE KEYWAY IN THE GEARBOX'S HOLLOW BORE. THE SHAFT NEEDS TO BE IN CONTACT WITH THE

SNAP RING.


SHAFT

SNAP RING-




FLANGE

6.) ATTACH THE SHAFT TO THE GEARBOX USING THE FIXING ELEMENT AND FIXING ELEMENT BOLT (BOTH PROVIDED). APPLY SERVICE REMOVABLE THREAD LOCKER TO THE BOLT AND TIGHTEN TO THE APPROPRIATE VALUE IN THE TABLE. THE IN TANK SHUT-OFF (ITSO) SHOULD HAVE A GAP BETWEEN IT AND THE TANK SIDE OF THE ANSI FLANGE ONCE THE BOLT IS TIGHTENED. ENSURE THE ITSO ROTATES FREELY WHEN SNAP RING THE SHAFT IS ROTATED.

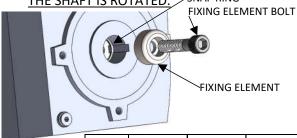

BOLT 18-8 & 304 316 **GRADES STAINLESS STAINLESS** 5 & 8 SIZE 10-32 15 in-lb. 17 in-lb. 16 in-lb. 1/4-20 29 in-lb. 30 in-lb. 38 in-lb. 5/16-18 52 in-lb. 54 in-lb. 84 in-lb. 96 in-lb. 102 in-lb. 13 ft-lb. 3/8-16 7/16-14 13 ft-lb. 14 ft-lb. 20 ft-lb. 18 ft-lb. 19 ft-lb. 31 ft-lb. 1/2-13 5/8-11 41 ft-lb. 42 ft-lb. 61 ft-lb. 3/4-10 57 ft-lb. 59 ft-lb. 108 ft-lb. 7/8-9 89 ft-lb. 93 ft-lb. 126 ft-lb. 141 ft-lb. 188 ft-lb. 135 ft-lb.

7.) INSTALL SHAFT COVER AND BOLTS BACK ONTO THE GEARBOX. RETURN TO THE RT153 SINGLE OR RT153 DOUBLE QSG TO FINISH INSTALLING THE SEAL.

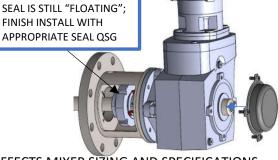



CAUTION:

THE VISCOSITY AND SPECIFIC GRAVITY OF THE FLUID AFFECTS MIXER SIZING AND SPECIFICATIONS