


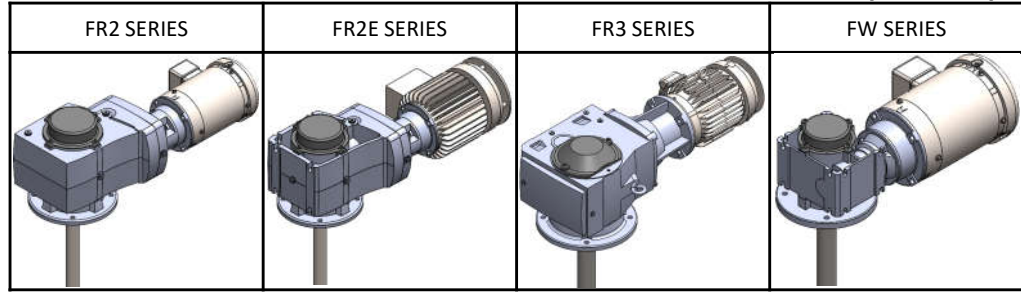


IN TANK SHUT-OFF







ENGAGING THE IN TANK SHUT-OFF (ITSO)




- 1.) INSTALL SEAL SET-UP CLIPS.
- 2.) LOOSEN SEAL SET SCREWS.
- 3.) REMOVE GEARBOX SHAFT COVER.
- 4.) REMOVE FIXING ELEMENT AND BOLT.
- 5.) REMOVE SNAP RING.
- 6.) FLIP THE FIXING ELEMENT AROUND.
- 7.) INSTALL FIXING ELEMENT BOLT AND TIGHTEN.

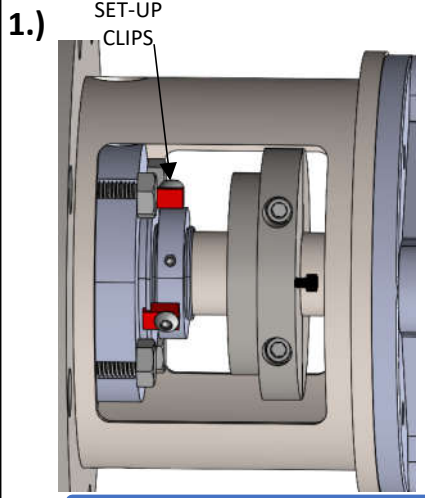


REINSTALL SET-UP CLIPS BEFORE ENGAGING THE ITSO

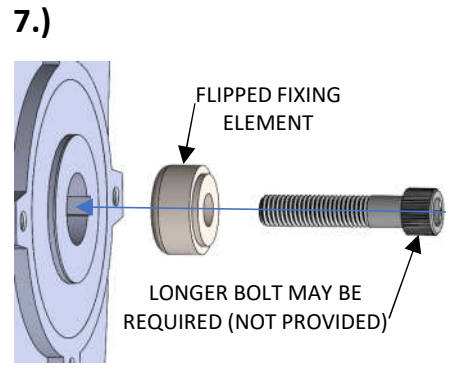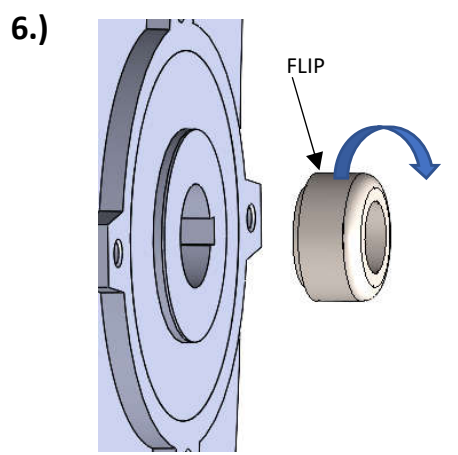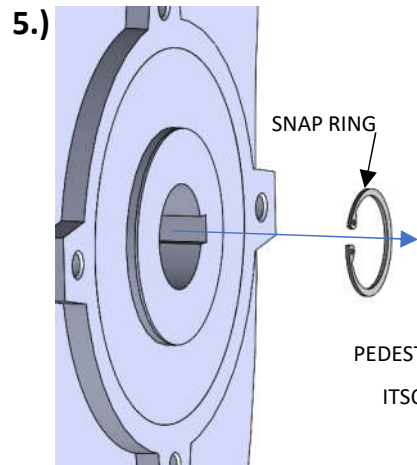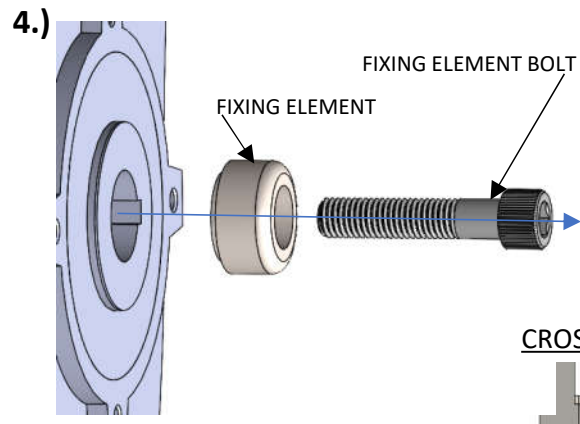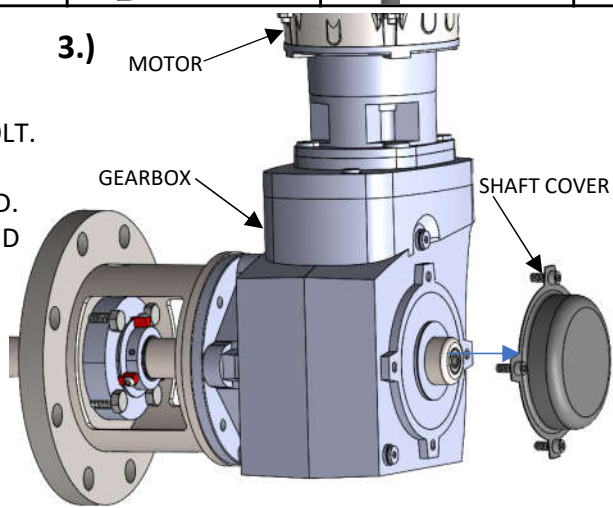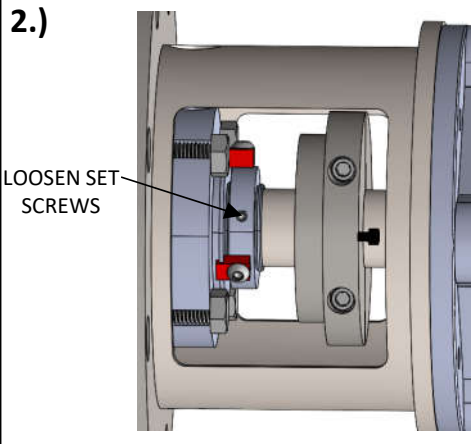

CROSS SECTION OF OPERATIONAL MIXER

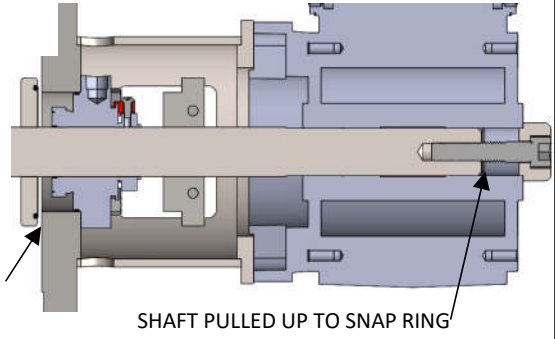

CROSS SECTION OF ENGAGED ITSO

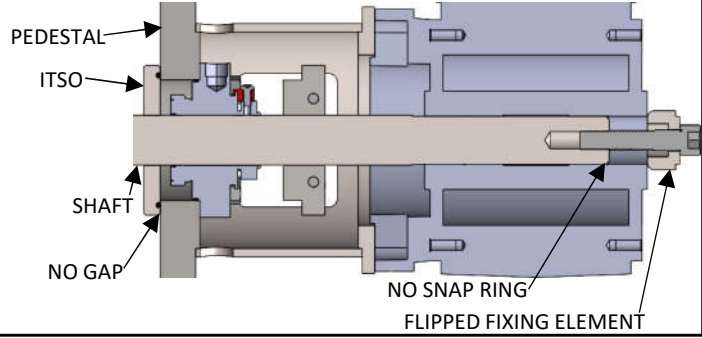

CAUTION
DISCONNECT MIXER FROM POWER SOURCE BEFORE ASSEMBLING, LIFTING, MOVING, OR SERVICING MIXER.